

homeLabs™

Mega

SwiftLid Trash Can


13 Gallon

FOR MODELS:

HME0085

HME0086

 HME0087

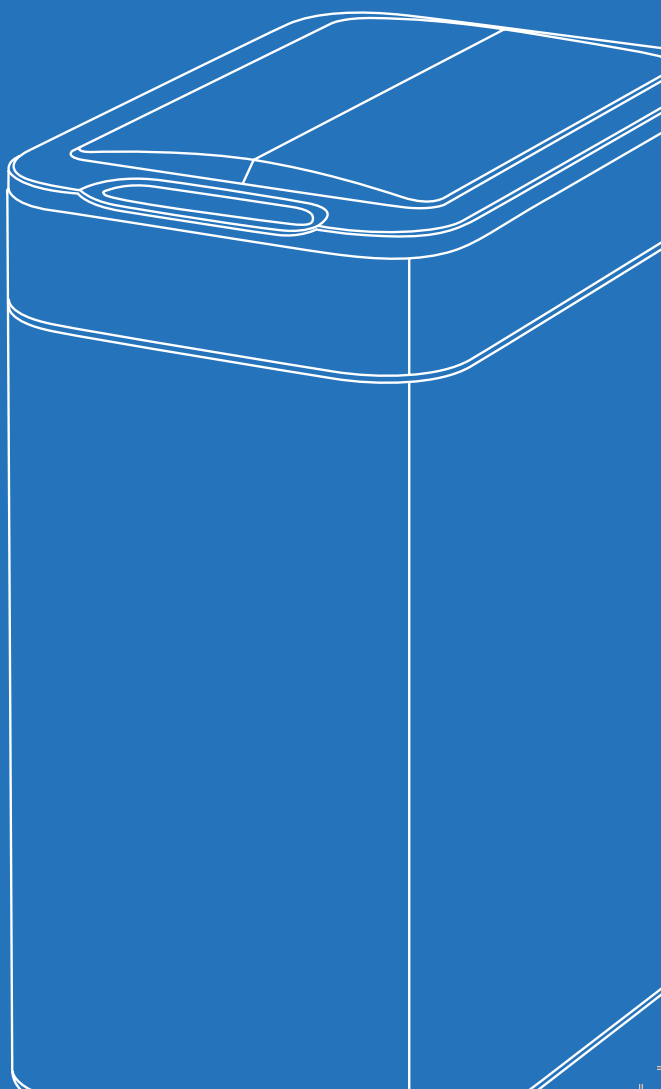



Thank you for purchasing our appliance.
Please be sure to read the entirety of this user manual carefully prior to using this appliance.
If you have any questions regarding the use of this product, please contact Customer Service at homelabs.com/help or help@homelabs.com

In the event this product malfunctions, or you believe it is defective, please contact Customer Service at homelabs.com/help, or help@homelabs.com and hold onto the defective product (pending further instruction). A defective product should be clearly marked or stored where it cannot be used by mistake. Failure to keep the product in its original quality from the time of receipt may impede hOmeLabs's ability to correct any legitimate problem and may limit the extent to which hOmeLabs may provide recourse.

Congratulations

on bringing home your
new appliance!



Don't forget to register your product at
homelabs.com/reg for updates, coupons,
and other relevant information.

Although greatly appreciated,
product registration is not required
to activate any warranty.

Important Safety Instructions

When using your hOmELabs SwiftLid Trash Can (appliance), basic safety precautions should always be followed to reduce the risk of electrical shock, and/or injury to persons. Incorrect operation due to ignoring instructions may cause harm or damage.

- Make sure there is enough room to operate the SwiftLid Trash Can without blocking the end of the Lid.
- Do not press or force the Lid of the SwiftLid Trash Can to close when it is open. Let it close by itself.
- To prevent battery leak that potentially causes damage to the electronic components, remove batteries if the unit is not intended to be used for a long time.
- Different types of batteries or new and used batteries are not to be mixed. Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
- Only use batteries of the same or equivalent type as recommended in the “Installing Process” instructions.
- This appliance contains non-rechargeable batteries, these batteries are not to be recharged.
- Be aware of the risk of terminals of the battery-operated appliance or battery being short circuited by metal objects.
- Avoid direct sunlight onto the infrared Sensor Panel.
- Ensure the Sensor Panel is kept clean for normal function.
- Do not use solvents or other chemicals to clean.
- Do not immerse the Lid Cover in water because it is equipped with electronic components. You can clean it with a damp cloth.
- Do not use the appliance for anything other than its intended use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Do not expose the appliance or battery to excessive temperatures.
- Exhausted batteries are to be removed from the appliance and safely disposed of;
- Do not use modified or damaged batteries.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.

Important information for correct disposal of the product in accordance with EC Directive 2012/19/EU.



At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

DISPOSAL

Do not dispose of this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

It is prohibited to dispose of this appliance in domestic household waste.

For disposal, there are several possibilities:

1. The municipality has established collection systems where electronic waste can be disposed free of charge.
2. As old products contain valuable resources, they can be sold to scrap metal dealers.

Wild disposal of waste in forests and landscapes endangers your health. Hazardous substances leak into the groundwater and find their way into the food chain.

RoHS Compliance

This product is in compliance with directive 2011/65/EU of the european parliament and of the council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

 


SAVE THESE INSTRUCTIONS


FOR HOUSEHOLD USE ONLY

Parts Overview


Control Panel

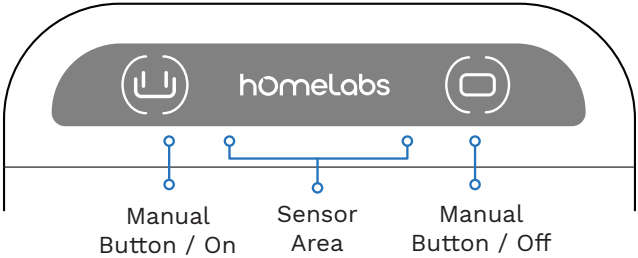


Trash Can Body

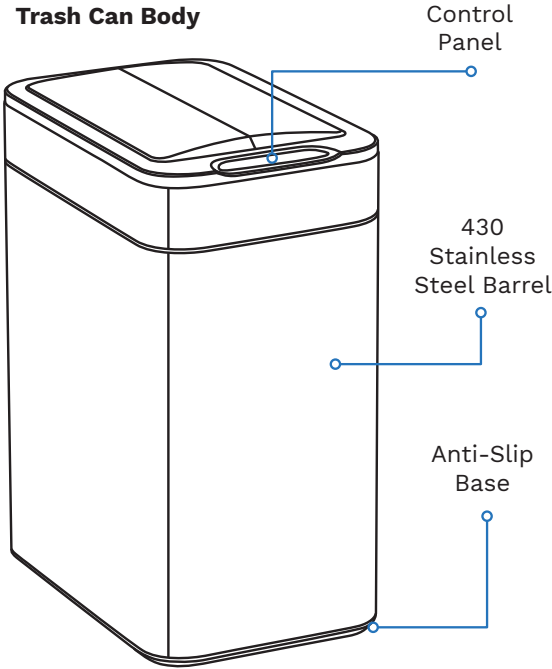 


Lid

 

Bag Retention Ring

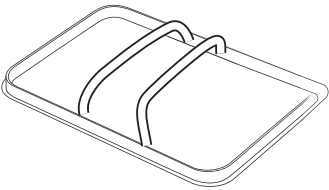 


 
Battery Compartment (bottom of the Base)

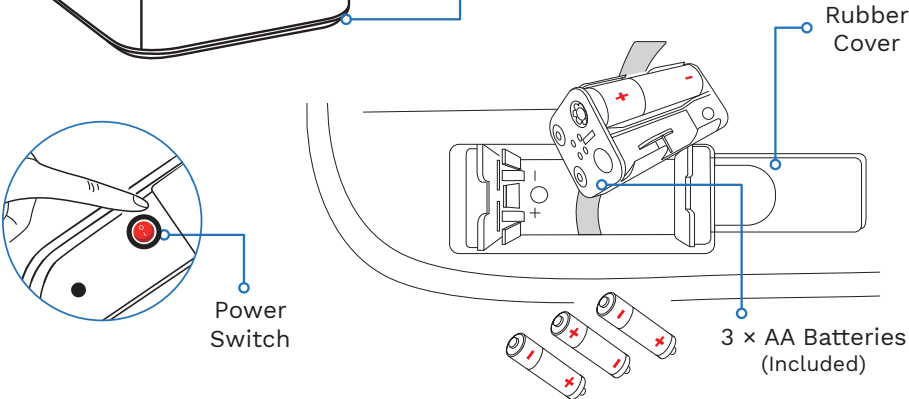

Installing Process





STEP 1 Insert the Empty Garbage Bag

  - 1 Place an empty garbage bag inside the SwiftLid Trash Can.
- 2 Secure the bag around the fixed Bag Retention Ring, ensuring it is properly positioned and free of wrinkles.

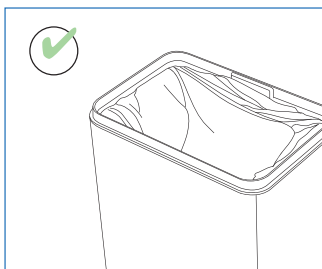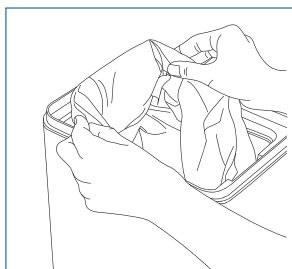


STEP 2 Install Batteries & Activate the Switch

    - 1 Insert 3 × AA Batteries into the Battery Compartment, following the +/- polarity markings.
- 2 Ensure the Rubber Cover is securely in place after installation.
- 3 Make sure the Battery Compartment is attached to the string, allowing for easy access in the future.
- 4 Turn on the Power Switch to activate the SwiftLid Trash Can.

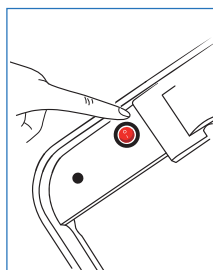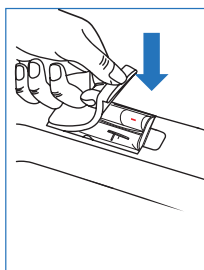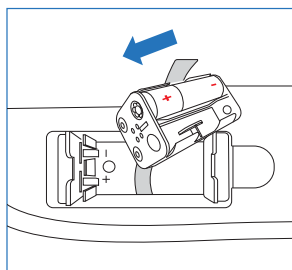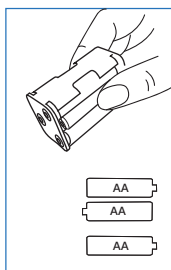



STEP 3 Manual Operation of the Lid

 - 1 Tap the button on the left side of the Lid to open it. The Lid will slowly open and stay open for 5 minutes.
- 2 To close the Lid, press the button on the right side. The Lid will close gently.

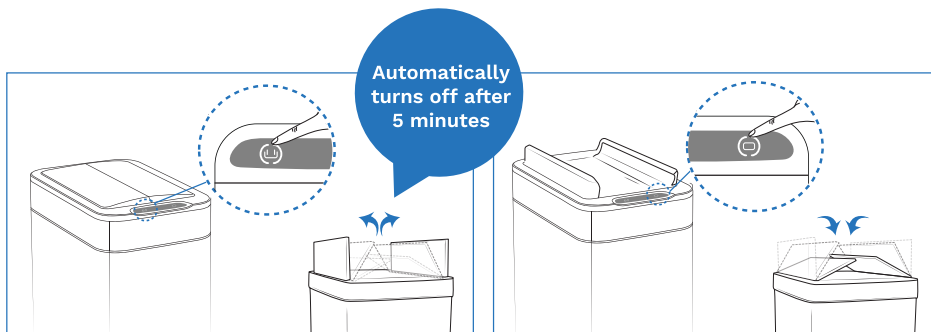

STEP 4 Intelligent Sensor Operation


 
 
- 1 To use the sensor, wave your hand gently over the Sensor Area.
- 2 The Lid will automatically open and close after 5 seconds.

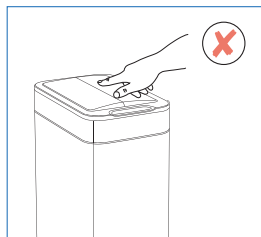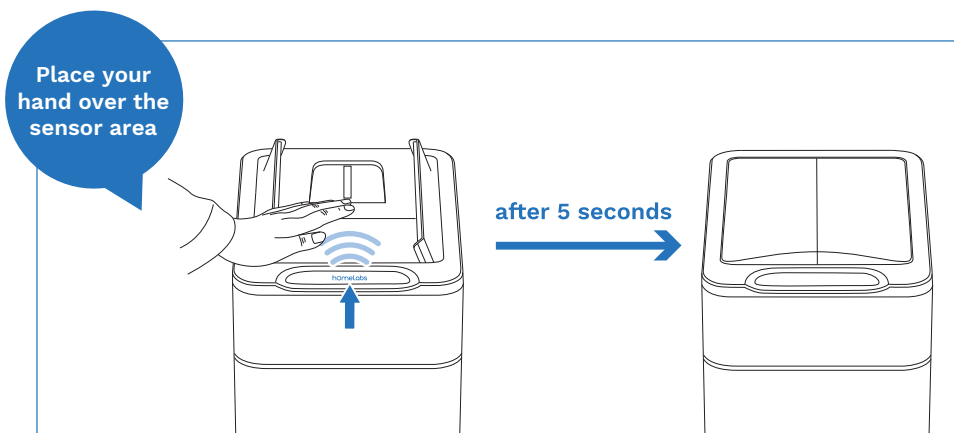

NOTE: Do not push the Lid during automatic operation. It will close on its own after 5 seconds.

STEP 5 Removing the Garbage Bag

   - 1 To replace the garbage bag, first remove the Lid and then the Bag Retention Ring.
- 2 Take out the filled garbage bag and dispose of it properly.

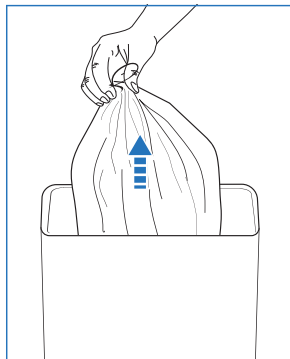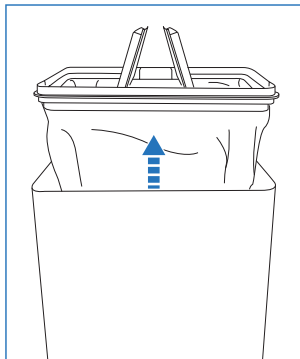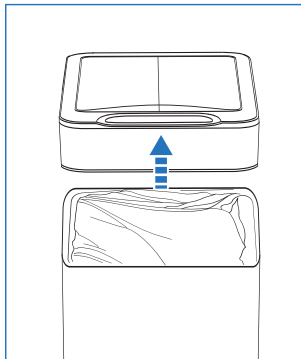

Troubleshooting

ISSUE	SOLUTIONS
Lid opens unusual	Check whether batteries are installed properly according to “+” “-” instruction or check whether Alkaline battery incurs low power, and then re-open the power source switch.
	Check whether sensing area is clean or not, please use neat cloth to wipe if it is dirty.
Lid closes unusual	Check whether electric circuits are damp. If yes, please do not connect power source. You can only use the SwiftLid Trash Can if it is dry.
	Check whether there is any obstacles around the Lid. If yes, please remove it. Highly reflective surfaces, such as white walls, can cause the lid to stay open. Please maintain a distance.
	Alkaline battery may incur low power, please replace it.
Lid opens slowly	Alkaline battery may incur low power, please replace it.

Warranty

hOmeLabs offers a limited one-year warranty (“warranty period”) on all of our products purchased new and unused from hOmeLabs Technologies, LLC or an authorized reseller, with an original proof of purchase and where a defect has arisen, wholly or substantially, as a result of faulty manufacture, parts, or workmanship during the one-year warranty period. The warranty does not apply where damage is caused by other factors, including without limitation to: (a) normal wear and tear; (b) abuse, mishandling, accident, or failure to follow operating instructions; (c) exposure to liquid or infiltration of foreign particles; (d) servicing or modifications of the product other than by hOmeLabs; (e) commercial or non-household use.

The hOmeLabs warranty covers all costs related to restoring the proven defective product through repair or replacement of any defective part and necessary labor so that it conforms to its original specifications. A replacement product may be provided instead of repairing a defective product. hOmeLabs’s exclusive obligation under this warranty is limited to such repair or replacement.

A receipt indicating the purchase date is required for any claim, so please keep all receipts in a safe place. We recommend that you register your product on our website: homelabs.com/reg. Although greatly appreciated, the product registration is not required to activate any warranty and product registration does not eliminate the need for the original proof of purchase. The warranty becomes void if attempts at repair are made by non-authorized third parties and/or if spare parts, other than those provided by hOmeLabs, are used. You may also arrange for service after the warranty expires at an additional cost.

These are our general terms for warranty service, but we always urge our customers to reach out to us with any issue, regardless of warranty terms. If you have an issue with a hOmeLabs product, please contact Customer Service at homelabs.com/help or help@homelabs.com, and we will do our best to resolve it for you.

This warranty gives you specific legal rights, and you may have other legal rights which vary from state to state, country to country, or province to province. The customer may assert any such rights at their sole discretion.

Manufacturing Information

This manual covers all items with these model numbers:

Mega SwiftLid Trash Can
13 GL

HME0085 / HME0086 / HME0087

Contact Us



CHAT WITH US

homelabs.com/help



EMAIL US

help@homelabs.com



For Household Use Only

Manufacturer: hOmeLabs™, LLC

350 Springfield Avenue, Suite #200,
Summit, NJ 07901

help@homelabs.com
homelabs.com/help

Importer/Responsible Person:

Photo Paper Direct Limited

Unit 8, Shakespeare Industrial Estate,
Watford, WD24 5RR, England

support@photopaperdirect.com

All rights reserved, hOmeLabs™.
Made in China.