

barista series

purée



DRIP COFFEE MAKER



USER GUIDE



Congratulations on your new Purée 5-Cup Drip Coffee Maker! Wake up to the smell of freshly brewed coffee every morning, for a warm and energizing start to each day. Whether you're preparing for a long road trip, a tough workout, or just another day at the office, with this coffee maker you'll always have a delicious batch of your favorite brewed beverage ready for your enjoyment.

Product Overview



Features

Brews fresh, hot coffee in just a few minutes.

Removable filter basket, for extra brewing convenience.

Sturdy glass carafe, with handle and cup measurement markings.

Brews up to 5 cups of fresh coffee at a time.

Easy to use and clean.

1. FILL WITH WATER.



2. INSERT THE PAPER FILTER.



3. ADD GROUND COFFEE.



4. POWER ON THE COFFEE MAKER.



Important Safeguards

Read the following instructions carefully before using the coffee maker:

Do not touch the unit while it is hot or while it is running.

Unplug the unit from the power outlet when it is not in use.

Always allow the unit to cool down completely before cleaning it.

Do not operate this appliance with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any way. Return this appliance to an authorized service facility for examination, repair or adjustment.

Do not attempt to disassemble, modify, or repair this unit. In case of any damage or malfunction, take it to a qualified technician.

Do not use this unit with any accessories other than those provided by the manufacturer.

The included container is designed to be use with this appliance. It must never be used on a rangetop.

Do not place this unit on or near heat sources, such as electric, gas, or induction stoves.

Do not use this unit outdoors. This unit is for indoor use only.

To prevent electric shocks, do not immerse the unit or its power cord in water or any other liquid.

Never leave the unit unattended while it is in use and/or plugged into a power outlet.

Do not refill the water reservoir while the unit is On. Allow the unit to cool down before filling it with water.

Only add cold or room temperature water to the water reservoir. Never add hot water.

Do not use this appliance if the carafe is cracked or damaged in any way.

Do not allow children or persons with reduced physical, sensory, or mental capabilities to use this product without adult supervision.

Keep this unit out of the reach of children. This product is not a toy.

Do not run a brewing cycle without the carafe on the warming plate.

Important Safeguards

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

Scalding may occur if the lid is removed during a brewing cycle.

Only store this appliance in a cool, clean, and dry place, away from water and any other liquid.

Do not immerse in water.

Close supervision is necessary whenever this appliance is used by or near children.

Save these instructions.



How to use

Place the coffee maker on a dry, level surface, away from edges and heat sources.

Open the lid on top of the unit, and insert the filter basket into the filter compartment.

Place a paper filter inside of the filter basket. Pour your desired amount of coffee grounds into the paper filter. Use one scoop of coffee grounds (approx. 5 grams) per cup of water.

Pour water into the unit's water reservoir. Use the water level indicator inside of the water reservoir to ensure that the correct amount of water is added. Close the lid.

Gently place the carafe on top of the warming plate. Make sure the carafe is properly aligned with the warming plate.

Plug the power cord into a nearby outlet, then flip the Power switch to the ON position to start a brewing cycle. The Power switch will glow during the brewing cycle.

Once the brewing cycle is complete, the warming plate will keep your coffee warm until the unit is powered off.

Flip the Power switch to the OFF position to turn the unit off, then unplug the coffee maker.

Serve and enjoy!

NOTES:

Before using the Drip Coffee Maker for the first time, it is recommended that you run two brewing cycles with water only.

Never turn the coffee maker on with the lid open.

During a brewing cycle, the carafe can be removed from the warming plate for up to 30 seconds to pour coffee. Do NOT remove the carafe from the warming plate for more than 30 seconds, as this can result in the filter compartment overflowing.

Do NOT start a brewing cycle if there is no water in the coffee maker's water reservoir.



CUSTOMER SUPPORT

If you have questions about using the Purée 5-Cup Drip Coffee Maker, we are here to help. Call or email us, and an experienced customer support representative will be happy to assist you: **support@tzumi.com** or **1-855-GO-TZUMI**.

Troubleshooting

Problem:

Pressing the Power switch doesn't start a brewing cycle.

Solutions:

Check that the unit is plugged in.

Make sure that the water reservoir has water in it.

Problem:

The Drip Coffee Maker is brewing slowly, or the brewed beverage tastes different.

Solutions:

Check that the water reservoir has enough water in it.

Clean and descale the Drip Coffee Maker to remove any buildups of mineral deposits that may be clogging the machine and/or altering the taste of the brew.

Problem:

Coffee is leaking around the filter compartment.

Solutions:

Align the filter basket correctly and place it securely in the filter compartment.

Make sure to use finely ground coffee.

Make sure the filter is correctly positioned in the filter basket.

Make sure the carafe is aligned with the warming plate.



Cleaning & Maintenance

Daily Cleaning

NOTE: The Drip Coffee Maker should be cleaned after every use.

Before cleaning the unit, make sure it is turned off, unplugged from the power source, and completely cooled down.

Remove the carafe and the filter basket, then wash them with warm, soapy water. Dry these parts thoroughly. They are also dishwasher safe.

Wipe the exterior of the coffee maker and the warming plate with a slightly damp and non-abrasive sponge, cloth, or towel. Dry it with a clean, non-abrasive towel.

To remove tough stains from the carafe, fill it with hot water, add baking soda or a mild cleaning solution, then let it sit for 20-30 minutes. For extra stubborn stains, leave the solution to soak overnight.

Descaling

Minerals in the water will leave deposits inside of the Drip Coffee Maker after every use. To safeguard the unit's performance, it is recommended that you clean these deposits periodically.

Fill the water reservoir with either a vinegar and water mixture ($\frac{1}{2}$ water and $\frac{1}{2}$ vinegar) or store-bought descaler solution, following the descaler's instructions.

Place the carafe on the warming plate.

Plug the coffee maker into a nearby outlet, and flip the Power switch to the ON position to start a brewing cycle.

Once the brewing cycle is complete, press the Power switch back to the OFF position, unplug the coffee maker, and discard the vinegar and water mixture or descaler solution.

Rinse the unit by running a brewing cycle with water only.

Descaling Frequency

The frequency with which you should descale the unit depends on the hardness of the water used, as well as how often you brew:

Soft water: approximately every 60 brewing cycles.

Hard water: approximately every 30 brewing cycles.



SPECIFICATIONS

Input: AC 120V/60Hz

Power: 650W

Carafe Capacity: 5 cups/25 oz.

Weight: 2.5 lbs.





purée™



WARNING

RISK OF FIRE OR ELECTRIC
SHOCK. DO NOT OPEN



WARNING: TO REDUCE RISK OF FIRE OR
ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.

REPAIRS SHOULD BE DONE BY AUTHORIZED PERSONNEL ONLY.

Purée™ 5-Cup Drip Coffee Maker. Distributed by Purée™, NY, NY, 10016. ©Copyright 2024 Purée™. All Rights Reserved. Made in China. All other trademarks and trade names are the property of their respective owners. All pictures shown are for illustration purposes only. Actual product may vary due to product enhancement. Subject to change without prior notice.

