



TURNING ON YOUR EARBUDS

METHOD 1: Remove your earbuds from the charging case.

METHOD 2: If the earbuds are not inside of the charging case or are turned off, touch and hold the RIGHT or LEFT earbud for 4 seconds, or until the blue LEDs flicker and you hear "Battery Percentage."

TURNING OFF YOUR EARBUDS

METHOD 1: Place your earbuds back into the charging case.

METHOD 2: Touch and hold your earbuds for 5 seconds, until you hear "Power OFF."

SINGLE EARBUD USAGE

Each earbud can be used independently.

BLUETOOTH PAIRING INSTRUCTIONS

FIRST: Remove both earbuds from the charging case. They will auto-pair to each other.

SECOND: Keep the earbuds within 3 feet of your smart device (for Bluetooth pairing only). Enable your device's Bluetooth function from its Settings menu. Select "SoundPlay V3" from the Bluetooth devices list to pair the earbuds to your device. Once paired, you will hear "Device Connected." Your SoundPlay earbuds are now ready to use!

NOTE: When you remove the earbuds from the case, a voice prompt will announce how much power they have left.

100%: 81% - 100%	75%: 51% - 80%
50%: 30% - 50%	25%: <30%

CALLING/MUSIC

ANSWER/END CALL

Touch the RIGHT or LEFT earbud 2 times.

REJECT CALL

Touch and hold the RIGHT or LEFT earbud for 2 seconds, or until you hear a prompt sound.

PLAY/PAUSE

Touch the RIGHT or LEFT earbud 2 times.

NEXT SONG

Touch the RIGHT earbud 3 times.

REWIND/PREVIOUS SONG

Touch the LEFT earbud 3 times.

VOICE ASSISTANT

Touch and hold the RIGHT or LEFT earbud for 2 seconds, until you hear a prompt sound to activate the Voice Assistant/Siri function. This function may not work with all devices.

CHARGING THE EARBUDS

When the earbuds are low on power, you will hear a voice prompt say "Battery Low." Place the earbuds into their respective slots in the charging case. They will automatically begin to charge. The LED indicators on the earbuds will glow solid red while the earbuds are charging. The LED indicator on the bottom of the case will turn white, then turn off after 4 seconds. Once the earbuds are fully charged, the LEDs on the earbuds will turn off.

Make sure to fully charge the earbuds before using them for the first time.

CHARGING THE CASE

Plug one end of the USB-C charging cable into the port on the case, and connect the other end to a USB power source, such as an AC wall adapter or computer. The LED indicator on the case will flash green while it is charging. Once it is fully charged, the LED indicator will glow solid green.

IMPORTANT SAFEGUARDS

- Do not use this unit for anything other than its intended use.
- Keep the unit away from heat sources, direct sunlight, humidity, water, or any other liquid.
- Do not expose the unit to extremely high or low temperatures, as doing so might damage the battery.
- Do not operate the unit if it is wet or damp to prevent against electric shocks, injuries to yourself and/or damage to the unit.
- Do not use this unit if it has been dropped or damaged in any way.

- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Keep this unit out of the reach of children. This product is not a toy.

CUSTOMER SUPPORT

If you have any questions about using your product, we are here to help. Call or email us, and an experienced customer service representative will be happy to assist you: **1-855-GO-TZUMI** or **support@tzumi.com**.

SPECIFICATIONS

Bluetooth Technology: Version 5.4
Battery (Earbuds): 35mAh (x2); 3.7V
Battery (Charging Case): 500mAh; 3.7V
Input Power Supply: 5V/0.4A
Earbuds Charging Time: approx. 1.5 hrs.
Charging Case Time: approx. 2 hrs.
Music Playback Time: approx. 6 hrs.
Frequency: 20Hz-20kHz

BATTERY DISPOSAL:

This product contains a lithium polymer battery. Lithium polymer batteries are environmentally safe when fully discharged. Please refer to your local and state laws for battery disposal procedures.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SoundPlay V3 Earbuds. Distributed by tzumi® Inc. NY, NY, 10016. ©Copyright 2024 tzumi Inc. All Rights Reserved. Made in China. All other trademarks and trade names are the property of their respective owners. Subject to change without prior notice.

